

Read these instructions before using the product and retain for future information.

## **DK 8000**

## 1. Before Startup



When operating the isolating amplifier, certain parts of the module can carry dangerous voltage! Ignoring the warnings can lead to serious injury and/or cause damage!

The isolating amplifier should only be installed and put into operation by qualified staff. The staff must have studied the warnings in these operating instructions thoroughly.

The isolating amplifier may not be put into operation if the housing is open. The adjustment with the potentiometer on the front may only be carried out with a screwdriver which is securely insulated against the input voltage!

In applications with high operating voltages sufficient distance and isolation as well as shock protection must be ensured.

Safe and trouble-free operation of this device can only be guaranteed if transport, storage and installation are carried out correctly and operation an maintenance are carried out with care.



Appropriate safety measures against electrostatic discharge (ESD) should be taken during range selection and assembly on the transmitter.

#### 2. Short description

The 3-way isolation amplifier is used for electrical isolation and conversion of customer-specific process signals.

The 3-way isolation guarantees reliable decoupling of the sensor circuit from the processing circuit and prevents linked measurement circuits from influencing each other. The Protective Separation with high isolation level provides protection for personnel and downstream devices against impermissibly high voltage.

## 3. Functioning

The input signal is modulated and then electrically decoupled using a transformer. The isolated signal is then made available at the output, demodulated, filtered and amplified.

### 5. Mounting, Electrical Connection

The isolation transmitter is mounted on standard 35 mm DIN rail.

Terminal assignments							
1	Input Input	5 6	Output + Output -				
3 4	Input Input	7 8	Power supply $\cong$ Power supply $\cong$				

Input connection assignment depends on device type. Please refer


#### 6. Technical Data

The devices of the series DK 8000 have custom-made modifications. The technical data can differ from this user instruction. Observe additional the notes

Input				
Input signal <sup>1)</sup>	Customer-specific, technical data see label			
Output	Voltage	Current		
Output signal <sup>1)</sup> (depends on type)	±10 V ±5 V 0 - 10 V 0 - 5 V 2 - 10 V 1 - 5 V	± 20 mA ± 10 mA 0 - 20 mA 0 - 10 ma 4 - 20 mA 2 - 10 ma		
Load	≤ 10 mA (1 kΩ @ 10 \	/) ≤ 12 V (600 Ω @ 20 mA		
Linear transmission range	Unipolar: -2 to + 110%			
Ripple	< 10 mV <sub>ms</sub>			
General data				
Transmission error	typical 0,1 %, (depends on measuring range, maximum 0,3 %)			
Temperature coefficient <sup>2)</sup>	± 100 ppm/K of end value			
Test voltage	Standard type: 4 kV, 50 Hz Input against output against power supply HV special type: 5 kV, 50 Hz Input against output / power supply			
Working voltage <sup>3)</sup> (Basic insulation)		1000 V AC/DC for overvoltage category II ar contamination class 2 acc. to EN 61010 part 1		
Protection against dangerous body currents <sup>3)</sup>	Protective Separation by reinforced insulation acc to EN 61010 part 1 up to 600 V AC/DC for overvoltage category II and contamination class 2 between input and output and power supply.			
Ambient temperature		C to + 70 °C (-4 to 158 °F) C to + 85 °C (-31 to 185 °F		
Power supply		C 48 62 Hz, approx. 2 V C approx. 1,0 W		
EMC <sup>4)</sup>	EN 61326 -1			
Construction	12,5 mm (0.5") housing, protection type: IP 20 pluggable screw connection solid/stranded 0.2 to 2.5 mm², AWG 24 to 12 tightening torque 0.5 to 0.6 Nm			
Connection				
Weight	Approx. 100 g			

- 2) Average TC in specified operating temperature range
- 3) As far as relevant the standards and rules mentioned above are considered by development and production of our devices. In addition relevant assembly rules are to be considered by installation of our devices in other equipments. For applications with high working voltages, take measures to prevent accidental contact and make sure that there is sufficient distance or insulation between adjacent situated devices
- 4) Minor deviations possible during interference


### 7. Block Diagram (typical)

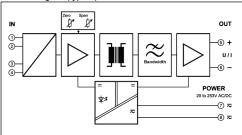

#### 8. Order Information

Product	Input / Output	Part No.	
Isolation Amplifier	Customer-specific	DK 8000 - XXX	

#### 9. Dimensions

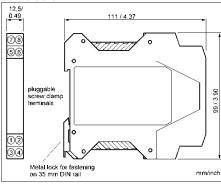

## LIMITED WARRANTY

DRAGO Automation GmbH hereby warrants that the Product will be free from defects in materials or workmanship for a period of five (5) years from the date of delivery ("Limited Warranty"). This Limited Warranty is limited to repair or replacement at DRAGO's option and is effective only for the first end-user of the Product. This Limited Warranty applies only if the Product:

- 1. is installed according to the instructions furnished by DRAGO;
- 2. is connected to a proper power supply;
- 3. is not misused or abused; and
- 4. there is no evidence of tampering, mishandling, neglect, accidental damage, modification or repair without the approval of DRAGO or damage done to the Product by anyone other than DRAGO.

Delivery conditions are based upon the "GENERAL CONDITIONS FOR THE SUPPLY OF PRODUCTS AND SERVICES OF THE ELECTRICAL AND ELECTRONICS INDUSTRY" recommended by the Zentralverband Elektrotechnik- und Elektronikindustrie (ZVEI) e.V. .

Subject to change!

# DRAGO Automation GmbH

Waldstrasse 86 - 90 13403 BERLIN **GERMANY** 

Phone: +49 (0)30 40 99 82 - 0 Fax: +49 (0)30 40 99 82 - 10

E-Mail: info@drago-automation.de Internet: www.drago-automation.de